

Aster Mini Clear Lens

Installation Instructions

(Note: The default lens has a 40° beam angle. Other beam angle lenses are not included.)

1. Rotate the white metal ring counterclockwise to loosen and remove the default lens.
2. Place your desired beam angle lens into the module.
3. Twist the white metal ring clockwise until the ring is firmly tight.

