


ACCRETION SURFACE MOUNT

TRIMS INSTRUCTIONS


Step 1:

Place the trim replacement on to the fixture.

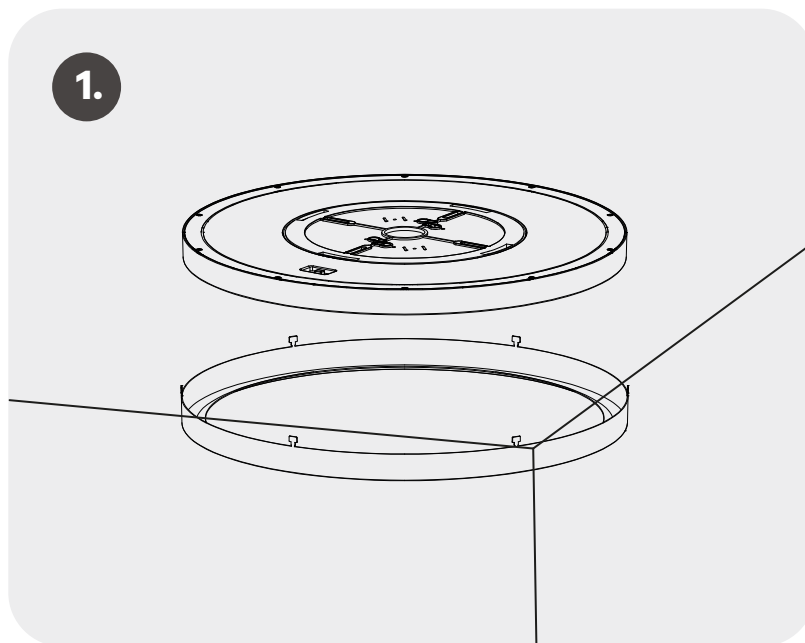

Step 2:

Confirm the trim replacement is properly fitted.

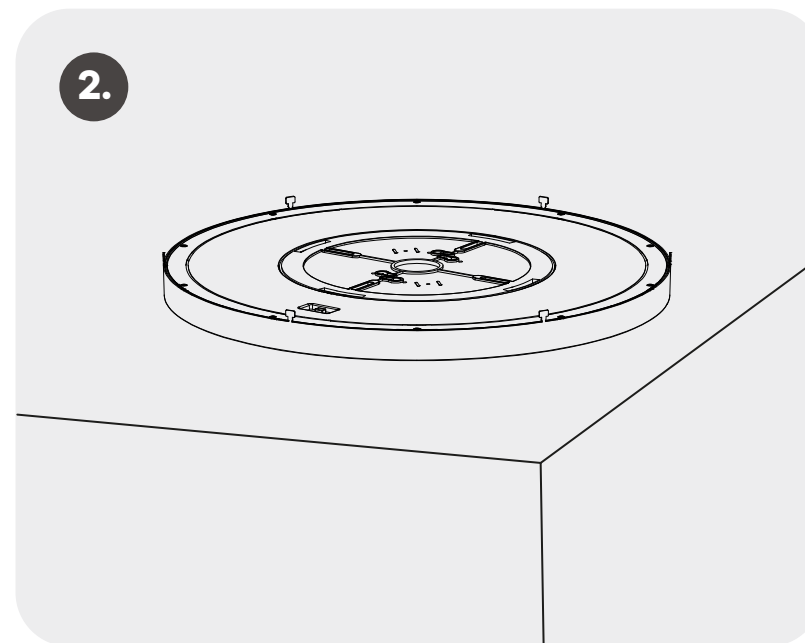

Step 3:

Lock the trim in place by firmly pressing & tightening at the four designated edge points.

