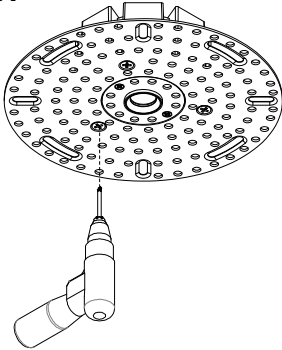
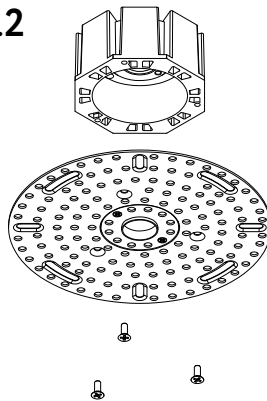
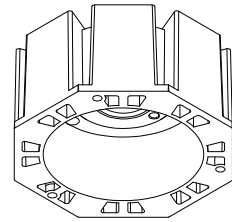
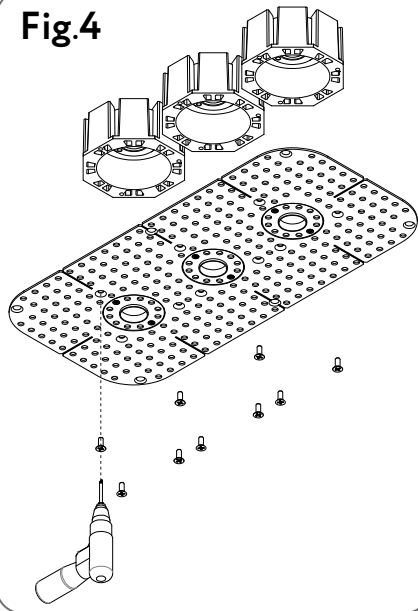


Silent Half Inch Triple Head Mud-In Plate

Installation Instructions

1. Remove the 3 screws from G-16000's front plaster frame using a screwdriver. (Fig.1)
2. Separate the front plaster frame from the heatsink. (Fig.2)
3. Install the heatsinks removed from G-16000 onto the G-16013 plaster frame.
 - Install the three heatsinks individually, ensuring each is securely fitted before moving to the next. (Fig.4)
 - (Caution: There are 9 screws in total. They should be installed into the holes marked with arrows. Please ensure all are properly tightened to avoid any damage or injury.)

Fig.1**Fig.2****Fig.3****Fig.4****Fig.5**