

ASTROFIT 3" RETROFIT MODULE

INSTALLATION INSTRUCTIONS

WARNING : These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes and the current National Electric code(NEC).

Electrical Parameters	Model	G-21305
	Input	120V / 277VAC 50/60HZ
	Output	33-38V DC 170mA
	Lamp Life	50,000 Hours
	Operating Temperture	-40°C to +40°C
	Dimming	Input:120V AC, Triac dimming Input:277V AC, Not dimmable
	Energy used	8W
	Luminous Flux	700LM
	Equivalent to:	70W halogen
	CCT Options	27K-30K-35K-40K-50K
	Beam Angle	40 Degree
	CRI	Ra>90
	Approved Location	Wet

Installation






Important: This retrofit kit is suitable for 3"/ 3.5" / 3.75" recessed housing, Please adjust the clips position according to your housing size.

Warning:

- 1.Risk of fire and electrical shock,LED retrofit kit installation requires knowledge of luminaires electrical system.Contact a qualified electrician.
- 2.Do not alter,relocate or remove wiring, lamp holder, power supply or any other electrical components.
- 3.To prevent electrical shock, please wear rubber shoes and work gloves when installing the retrofit kit.


Installation Steps:

- 1.Turn off the power before installation.Remove the existing bulb and if necessary remove the existing trim.
- 2.Twist the trim onto the LED module.and make sure they are well connected.(Fig 1).
- 3.Choose your target CCT on the back of the LED module(Fig 2).
- 4. Twist the lamp base into the GU10 socket.(Fig 3).
- 6.Tuck all the wires carefully into the can push the retro fit kit into the can until flush with the ceiling.(Fig4).
- 7. Turn on the power to operate the unit.

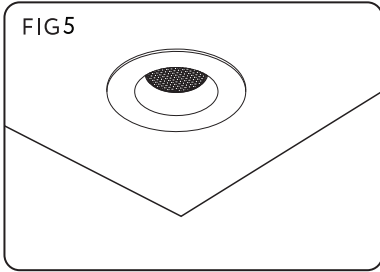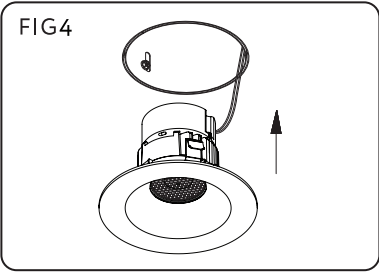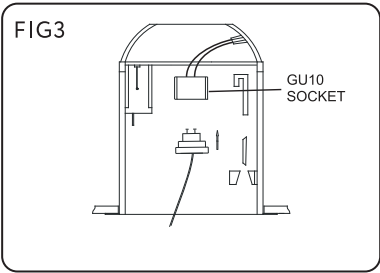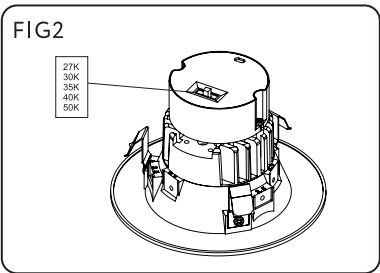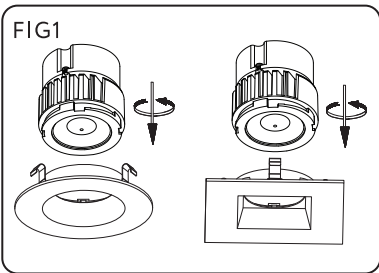


Fixture Assembly

(Trim is not included)

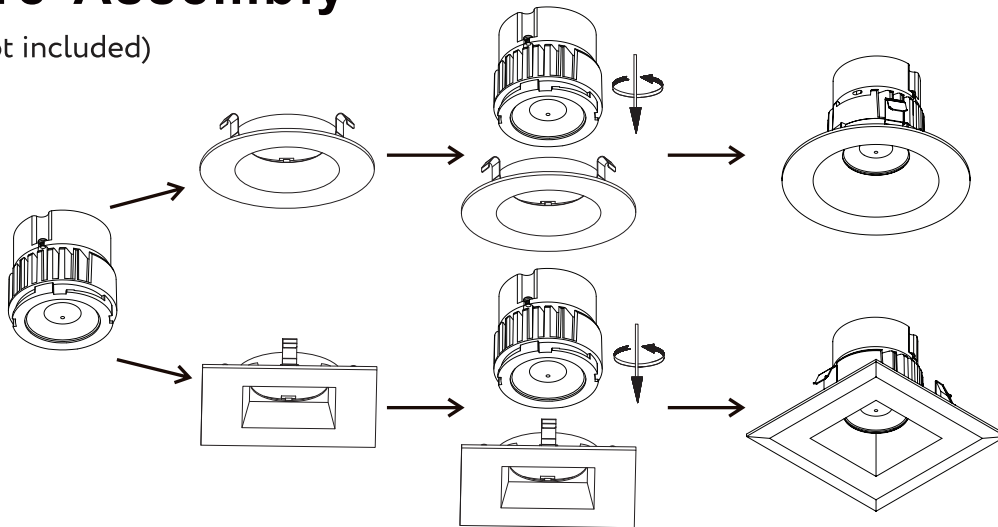

Changing Different Beam Angle Lens and Reflector


(Remark: G-21305's default beam angle is 40degree, other beam angle lens and Reflector are not included)

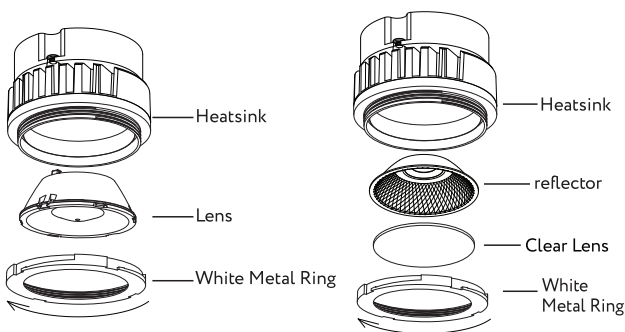

- 1.Remove the white ring by twisting it counterclockwise.
Twist the default lens counterclockwise to take it out.
- 2.Install your target beam angle lens or reflector
back to the module.
- 3.Twist the white metal ring clockwise to fi xing the
lens or reflector well.

Installing the honeycomb into the Module

(honeycomb is not included)

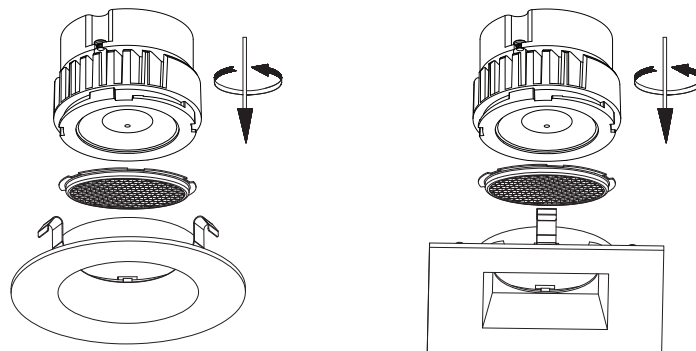

- 1.Put the honeycomb into the trim.
- 2.Twist the module clockwise onto the trim.