


12 CUBIC INCH JUNCTION BOX

INSTALLATION INSTRUCTIONS

Step 1:

Twist the default 6.2" wiring box anti-clockwise to take off it.

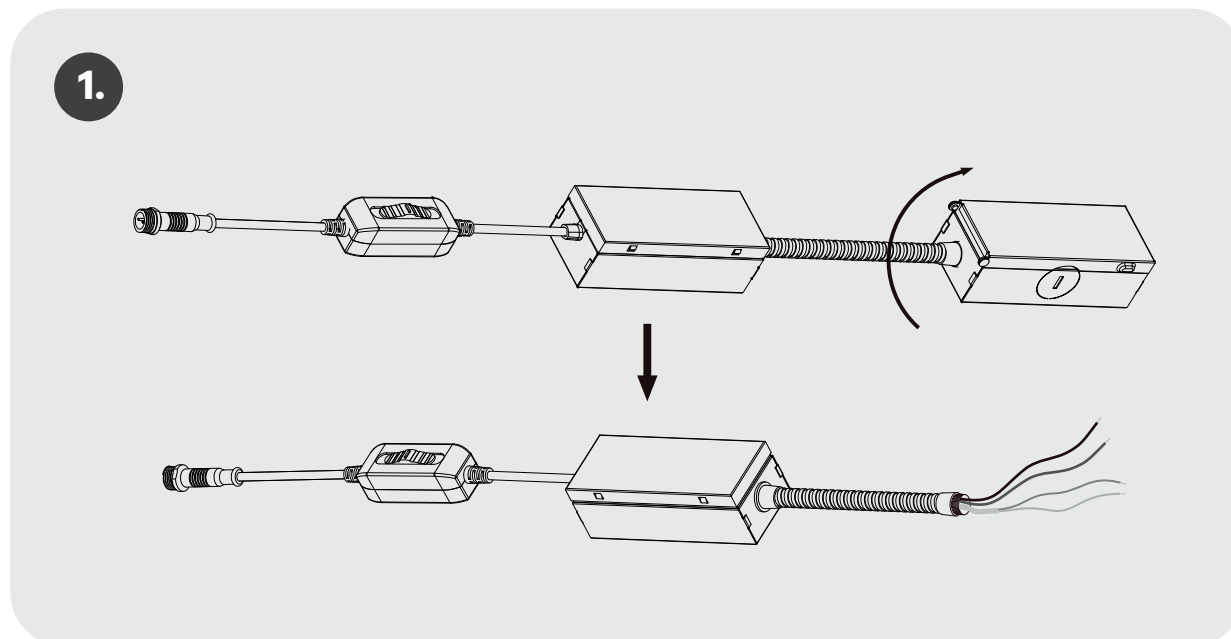

Step 2:

Insert the wires through the 12 cubic inch wiring box hole, twist the wiring box clockwise to connect with the BX cable.

