

MINI RECESSED LED PUCK LIGHT

INSTALLATION INSTRUCTIONS

Important

Read all instructions before installing fixture. Retain for future reference.

Important Safety Information



1. This fixture must be wired in accordance with local electrical and ordinances.
2. To extend driver life span, do not exceed 80% driver rated load.
3. All work should be done by a qualified electrician.

Warning

Make certain power is OFF from the electrical panel before starting installation or attempt any maintenance.

Installation Instruction

Step 1.

Carefully open a hole in accordance to the cut - hole dimensions with keyhole saw (Fig.1).

Step 2.

Make a daisy chain connection with wire nuts (Fig.4). Connect red wire(+) of cable to red wire(+) on LED fixture. Connect black wire(-) of cable to black wire(-) of LED fixture.(Fig 2)

Step 3.

Rest driver to the desired secured location.


Step 4.

Push the LED fixture upward towards the hole until the trim is flush with the ceiling. (Fig 3)


Step 5.

Once assembly is complete, turn on power to confirm the fixture is working properly.


1.

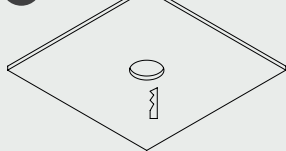

2.

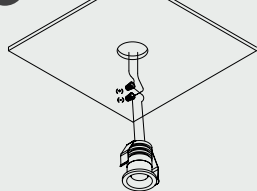

3.

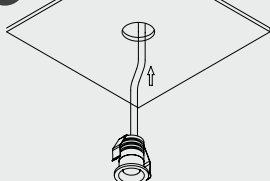

Hole Cut Size

Ø 0.69" (17mm)

4.

