



Installation Instructions

1.

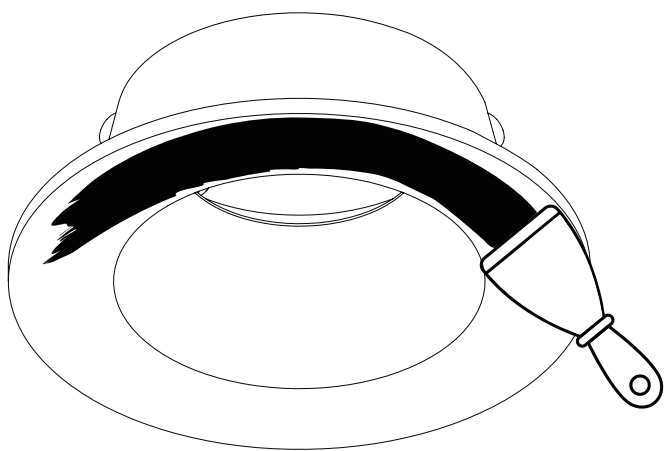

1. The trim is pre-primed, please paint the desired color by professional person.

2.

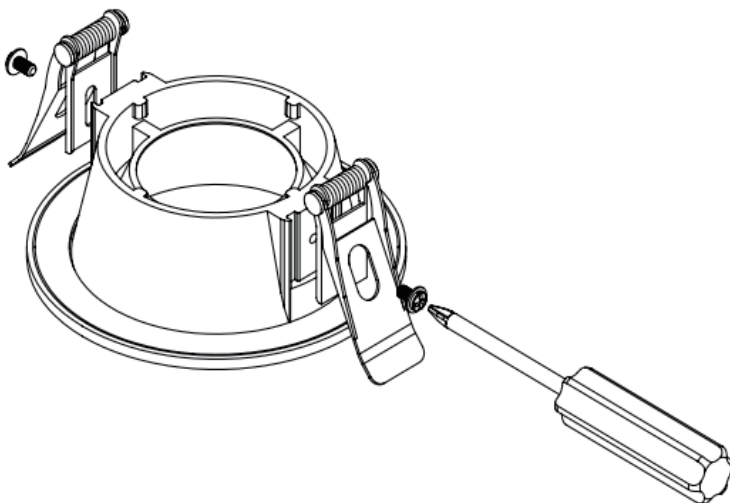

2. Please install the two clips with the screws provided after the painted oil is dry.