

ELECTRONIC WALL SWITCH DRIVER + RGBCCT + DIMMER SLIDER

INSTRUCTION SHEET

G-99724




Included Accessories


HORIZONTAL
WIRING BARRIERWALL SWITCH
MOUNTING SCREWSVERTICAL
WIRING BARRIER8
WIRE NUTS

Wiring Diagram

NOTICE: Installation and service must be performed only by qualified electrical personnel using appropriate safety equipment.

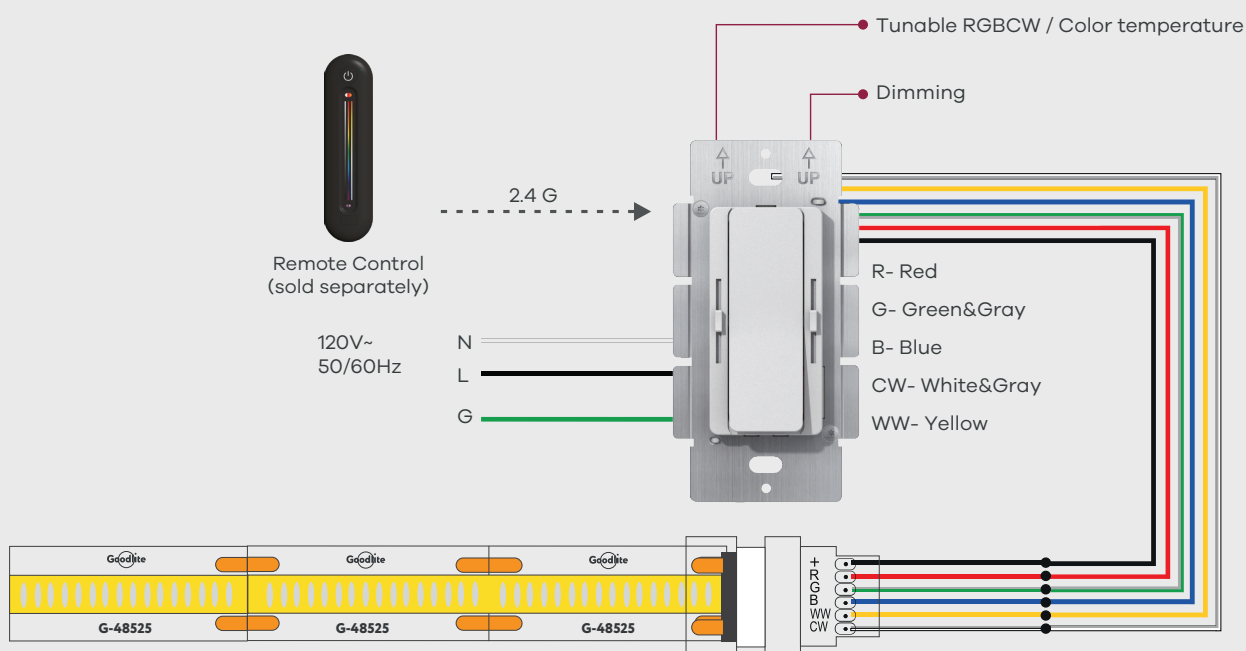


3 Way Switch Wiring Diagram

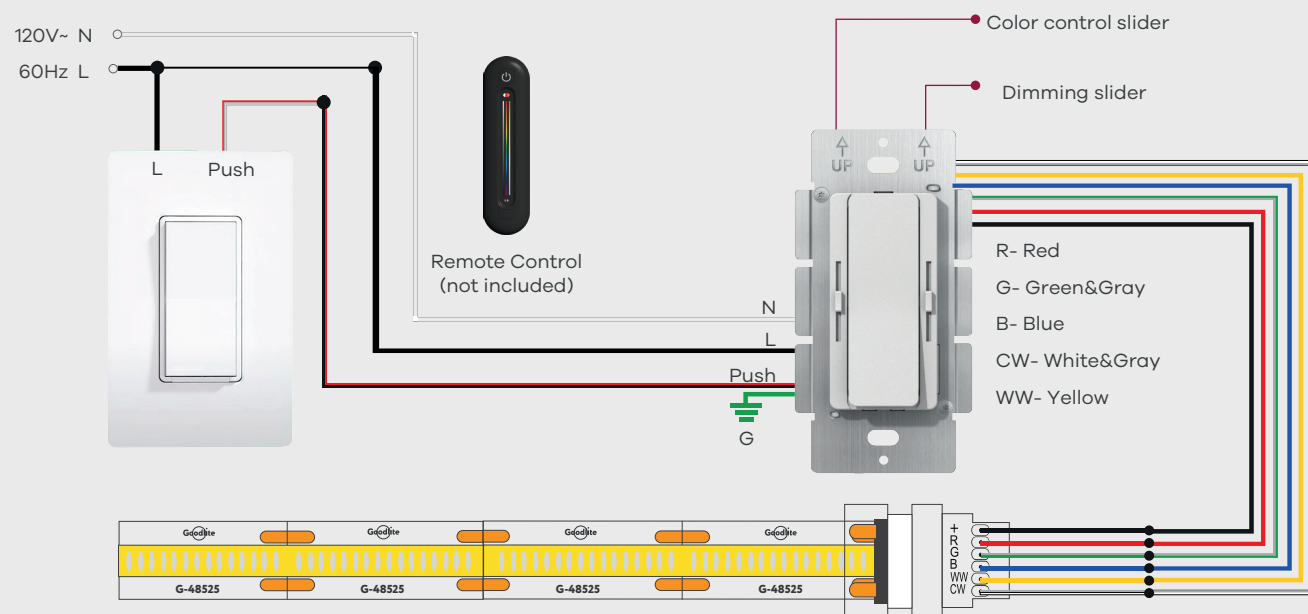


Double Switch Installation

When installing multiple dimmers in a single wall box, you must remove the side fins to allow them to fit properly

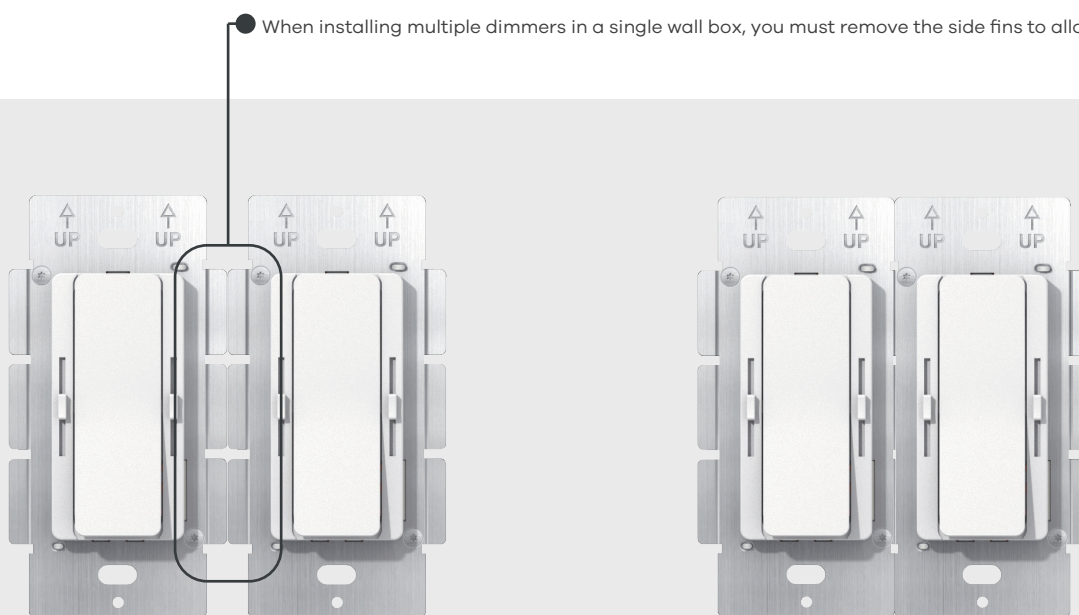

Vertical barrier Installation

1.

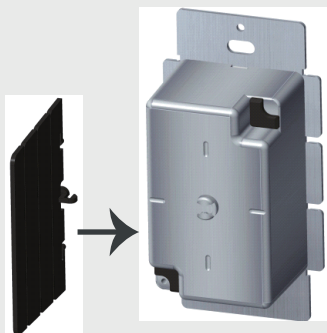

2.




**Step 1:**

Align the vertical barrier with the opening of the rotating column located on the bottom shell.

Step 2:

Slide it in the direction of the arrow until the buckle snaps onto the outer wall of the rotating column



3.

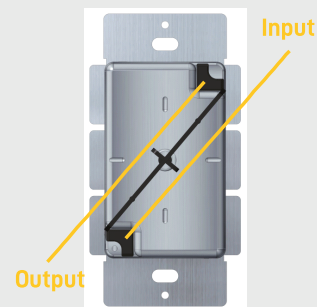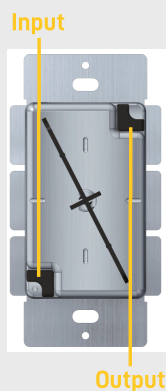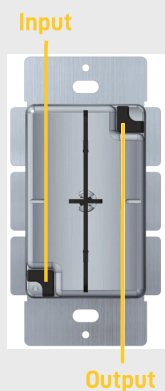**Step 3:**

The vertical barrier is designed to accommodate various regional input configurations. Simply rotate the plate to route the input wires from either above or below.

Shallow Boxes Installation

If using a shallow box, shorten the barrier by gripping the fin with pliers and bending it back and forth until it snaps off.

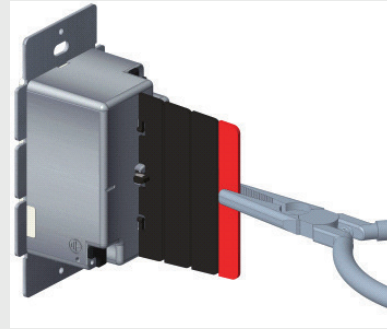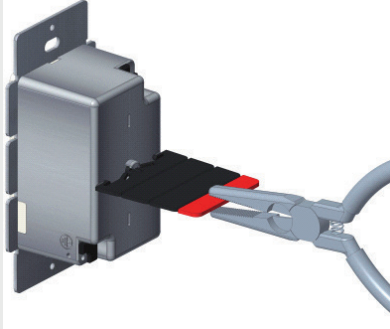

Shallow Boxes Installation



For extra-shallow wall boxes, you can use the dimmer housing as a barrier. Simply tuck the wires along the top and bottom edges of the housing.

Remote Control Pairing Instructions



Pairing Window (30-Second Limit):

Flip the light switch off, then back on, to activate the pairing window. The system will automatically exit this mode after 30 seconds.

To Pair: Press and hold the Pair button for 3 seconds. The light will breathe for 5 seconds to confirm a successful connection.

To Unpair: Press and hold the Unpair button for 3 seconds. The light will flash for 5 seconds to confirm it has been disconnected.

Note: A single driver/dimmer unit can be linked to a maximum of 10 remote controls.



Color Mode Indicator

Double-click to Cycle Modes:
CCT (Blue, 2s),
RGB (Red, 2s),
RGBW (Yellow, 2s),
RGBCW (Green, 2s).

WiFi Linking Instructions

Download Apps:




Also compatible with:




Tuya / Smartlife Linking Instructions

1. Open your device / app to pairing mode
2. Short-press the reset button on the bottom of the driver, or quickly press the switch button six times
3. Select pair new item in the app

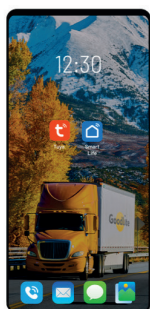


Install / Login to the app

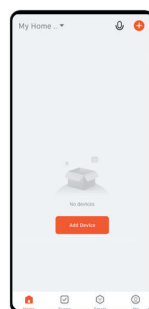

Enter the Tuya app & add the Controller



Once Controller has been recognized Tap device symbol to be added

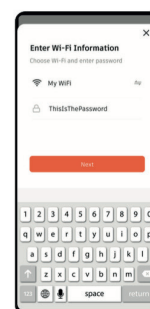

Enter your Wi-Fi information



Once device has been successfully added Tap "Done" to enter device control




You have successfully entered the device control Tap on symbol to turn on the light




CCT CONTROL



RGB CONTROL

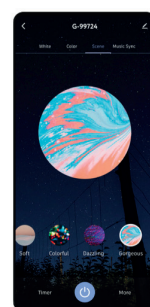

RGB PRESET SCENE

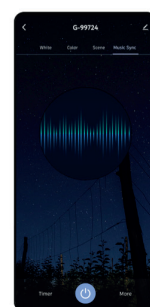

RGB MUSIC SCENE

Clearing Paired Devices

To clear all existing paired devices, press and hold the reset button for 5 seconds. Once cleared the indicator light will flash for 5 seconds to signal that pairing mode has restarted.

